


STANDARD DOOR KIT

PLEASE NOTE: A mallet is usually required to tap the joiners into the tubes. Please ensure the joiners are fully submerged into the aluminium.

DOOR CONTENTS

2	ALUMINIUM TUBING 1.854M
2	ALUMINIUM TUBING 750MM
1	ALUMINIUM TUBING 2.2M
1	LARGE ANCHOR

1	DOOR CATCH
3	DOOR HINGE JOINT
4	DOOR JOINER CORNER
1	UPRIGHT TUBE CLIP
3	SELF-TAPPING SCREWS

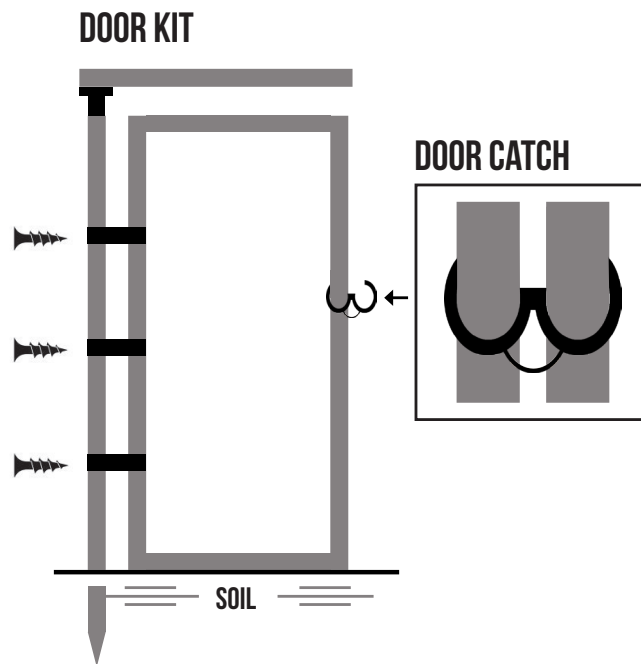

(Build the door)

Slide the 3 hinges onto one of the 1.85m tubes.

Join the 2 x 750mm & 2 x 1.85m tubes with the door corners, creating the frame.

Slide the open side of the hinges onto the 2.2m upright tube. Tap in the 'self-tapping' screws on this side to stop the hinges from moving. Push the Y connector into the top of the 2.2m tube.

(Fit the door)

The door can be fitted anywhere on the cage but must be positioned so that the right-hand side (if you are stood outside the cage) is next to an upright (2.2m pole) to enable the door catch to be fitted. Push the remaining ground anchor into the ground around approx. 800mm from the upright.

Take the 2.2m pole with the Y connector (this will have the door frame attached to it also) and push it up onto the crossbar, slotting it into the anchor at the same time.

Take the door catch and push onto the two poles.